

How to connect a compression thread feed valve

HL# 12010



1/2" QC x 3/8" Comp.
Thread Tee Feed Valve

HL# 12045



3/8" x 3/8" Comp.
Thread Tee Feed Valve

HL# 12025



1/4" QC x 3/8" Comp.
Thread Tee Feed Valve



1
Shut off water supply at
brass/chrome cold water
supply valve.



2
Disconnect the line from
the brass/chrome supply
valve.



3
Ensure the sealing gasket
is fully seated into the feed
valve female thread.



4
Install and tighten the
feed valve on the supply
valve.



5
Connect and tighten the
line to the feed valve.



6
Fully insert the tubing into
the quick connect fitting
on the feed valve



7
Once all connections are
made open the supply
valve and check for leaks.